


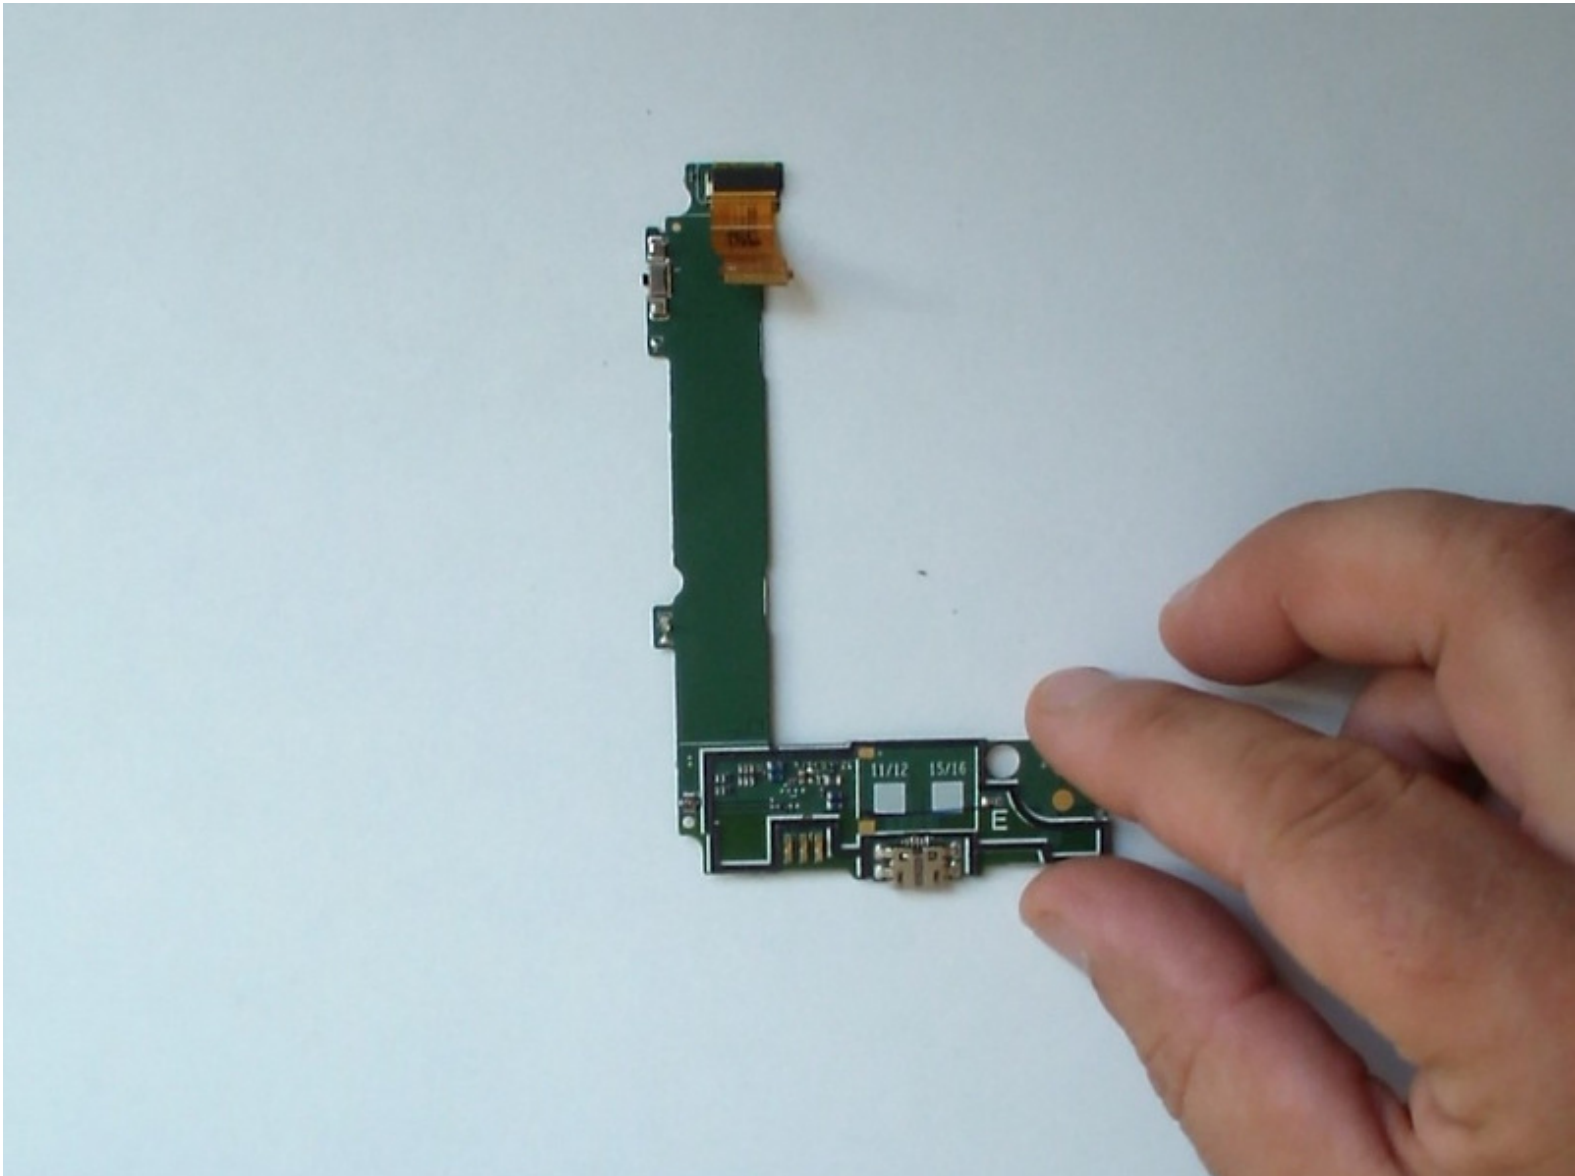

Microsoft Lumia 535 Charging Port Dock and Microphone Flex Replacement

Microsoft Lumia 535 Charging Port Dock and Microphone Flex Replacement

Written By: ZFix



INTRODUCTION

Lumia 535

RM-1090 / RM-1091/ RM-1089 / RM-1092

If you have a problem with the charging port or the microphone you have to change Microsoft Lumia 535 Charging Port Dock and Microphone Flex.

[video: <https://www.youtube.com/watch?v=ykqv8C324UA>]



TOOLS:



- [T4 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [Heat Gun](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Plastic Cards](#) (1)
-

Step 1 — Back Cover / Rear Case



- Turn off the phone.
- Remove the battery and any SIM and memory cards.

Step 2

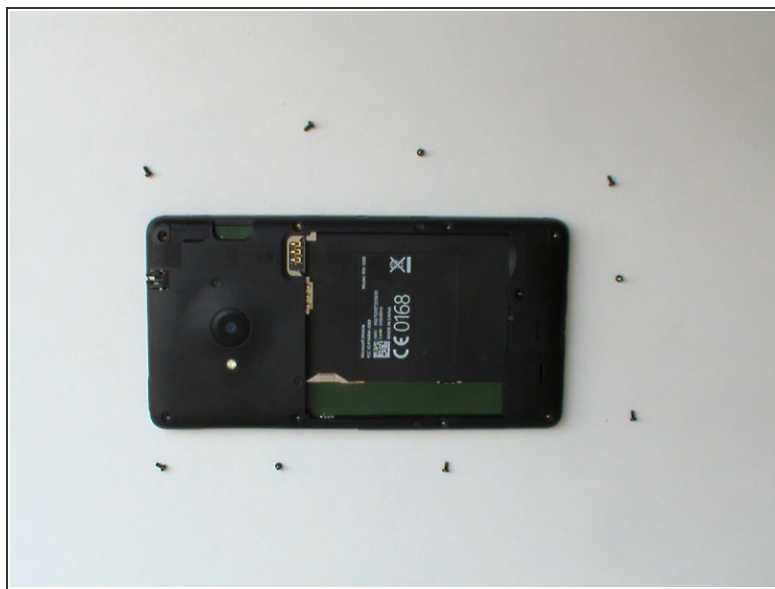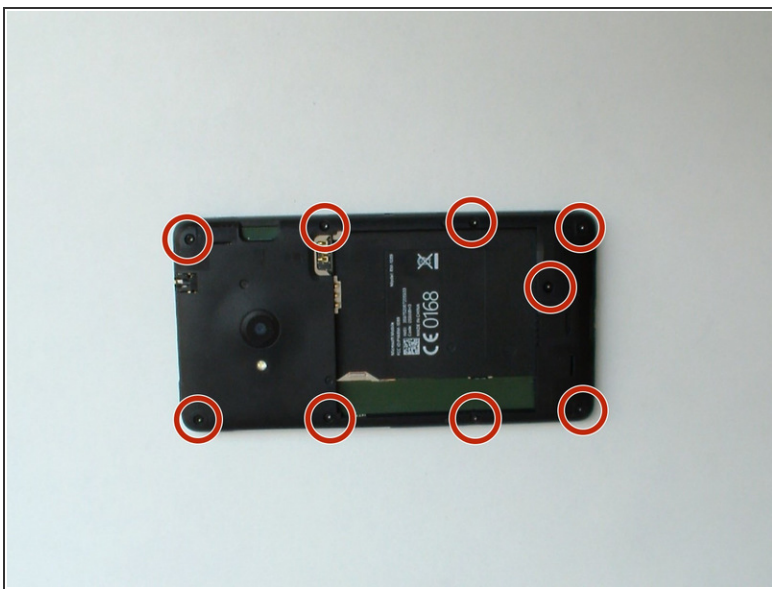


- With a screwdriver Torx T4 remove the 9x screws.

Step 3






- With a plastic opening tool separate the back cover from the middle frame.

Step 4 — Logic board

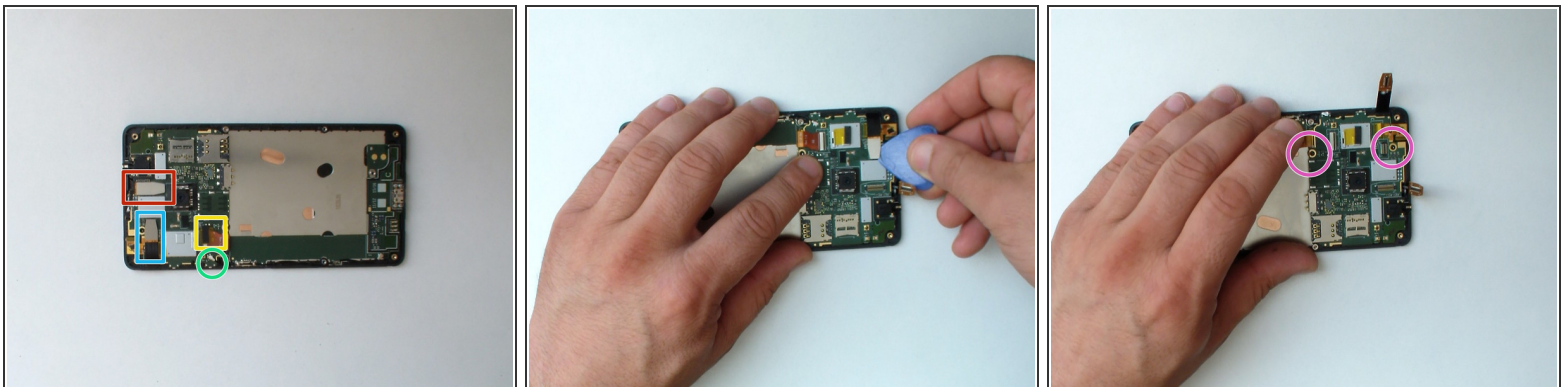




- Disconnect:
 - Touch screen flex cable
 - LCD Display flex cable
 - Charging Dock board flex cable - remove the foam and tape, then flip up the black lock before easing out the flex.
 - Coaxial antenna cable - take your time here, be sure to pull the metal connector and not the cable or you risk pulling the cable from the connector.
- Remove the 2x Torx T4 screws.

Step 5

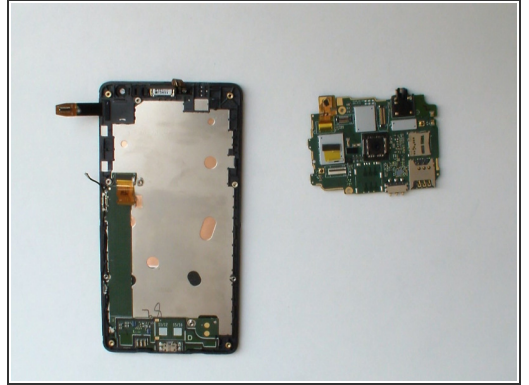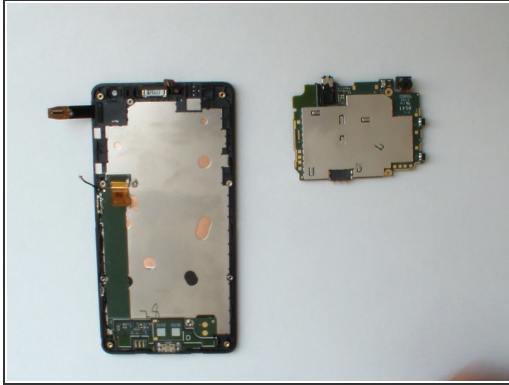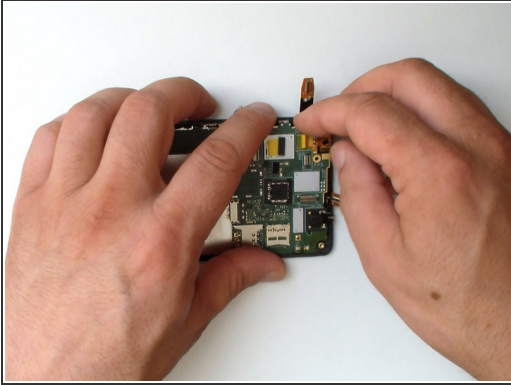


- Insert wisdom here.

Step 6 — Charging Port Dock and Microphone Flex

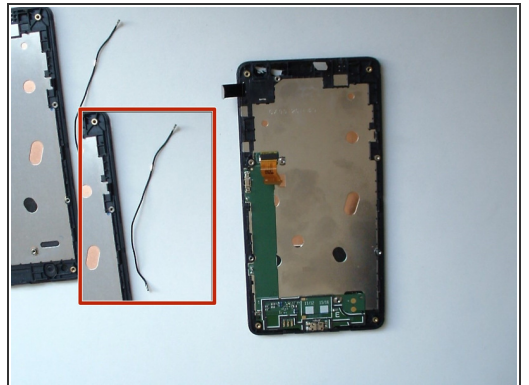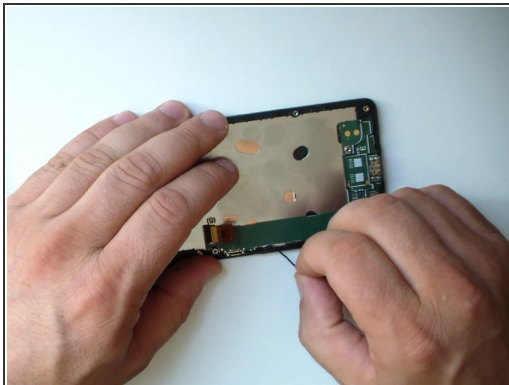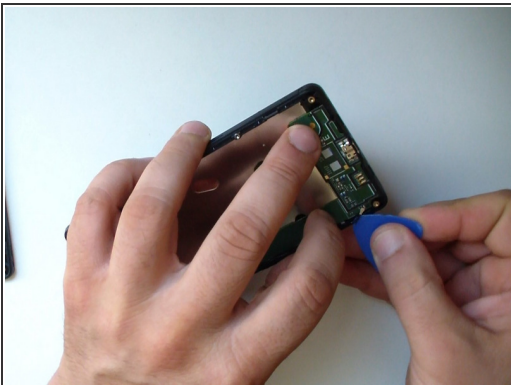

- Disconnect the coaxial antenna cable.
- The cable is attached at several points to the frame and to the board. Gently remove it.

Step 7

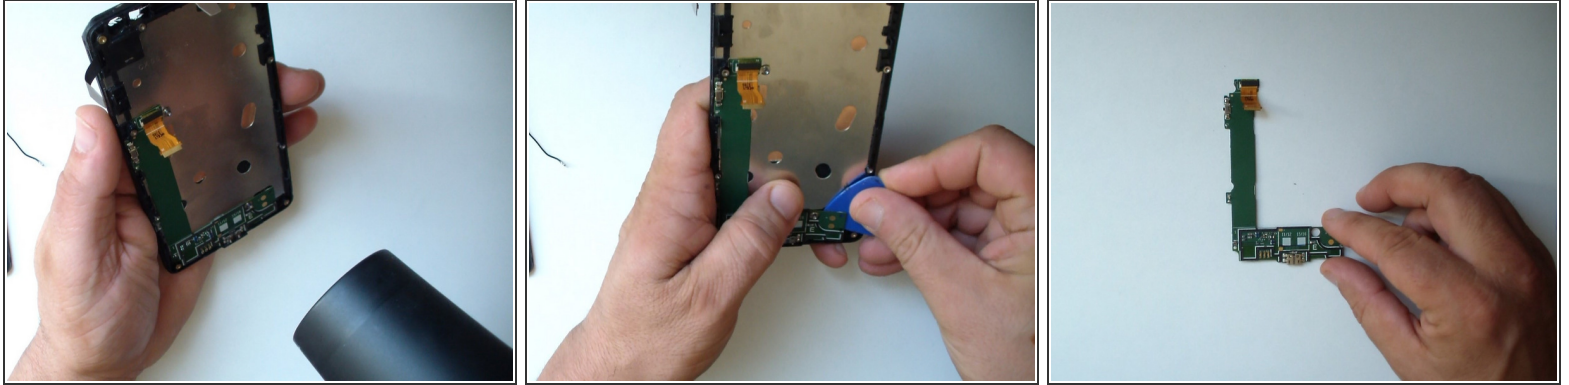

- The board is glued to the main frame by adhesive tape.
- Use a hot gun or hair dryer and warm the board.
- Now you can easily separate the board from the main frame.

 For the separation process use only plastic tools.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-10 09:48:11 AM.